


# Smart, simple, unique



# SMARTOP™ Simple, clever valve

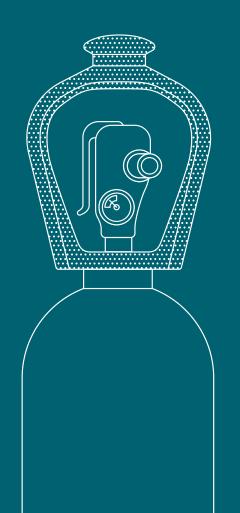

## On/off lever

- Easy opening
- Immediate gas cut-off
- On/off status at a glance



#### Permanent gauge

- At a glance content monitoring
- Get a reading even when flow is stopped

### RPV/NRV function

- Keep minimal pressure in the cylinder
- No back-flow contamination during use and storage



## Ergonomic cap

- Easy handling of the cylinder
- Permanent, reliable protection for the valve

# Instructions

1 Check that the lever is off



2 Check that regulator is in off position and connect your regulator to SMARTOP™



# 3 Open the on/off lever



# 4 Set the outlet pressure or flow rate on your regulator



# 5 You are ready to go!

Check the instruction manual for detailed information

# Simplify your gas cylinder use with SMARTOP™

### Save time

- Quickly stop gas with on/off lever
- Easy handling thanks to ergonomic cap

## Work safely

- Emergency cut-off
- Protected valve

## Save gas

- Eliminate gas loss with on/off lever
- Check content at a glance with permanent pressure gauge



Contact us 800.909.8058 Airgas.com MCM-486 | ©2017 Airgas, Inc Printed in the U.S.A.

